


Director's Chair Setup Instructions



Step #1

Slide wood dowels in the hem of the chair seat. Partially open the chair as shown. Slide seat cover into side grooves until flush with front of chair.

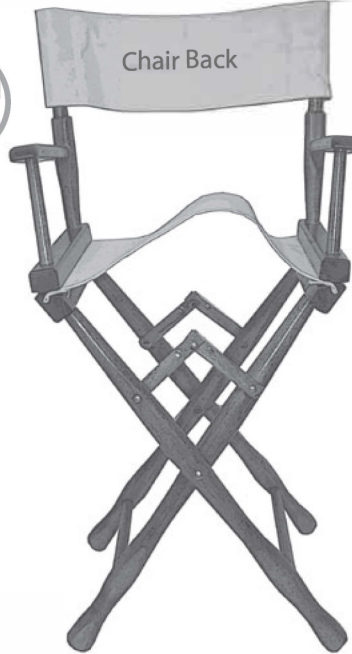

Step #2


Raise arms to upright position. Slide the chair Back down over the chair posts as shown.



Step #3


Open the chair until the seat begins to tighten. Using your shoe apply slight downward pressure to the front cross brace until it locks. Repeat for the back cross brace.

Setup Instructions

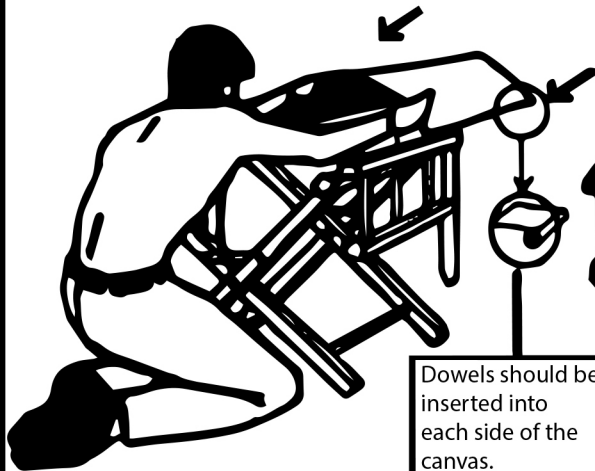


Dowels should be inserted into each side of the canvas.

Step #1
Fold arms down, pull legs close together, and slide seat cover into side grooves.

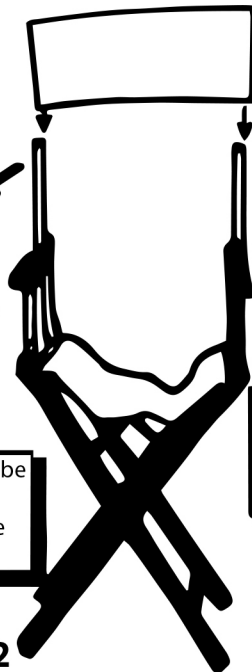

Step #2
Raise arms to install the back cover over the back posts.

Press down on front and back hinges with foot to lock in safety position.

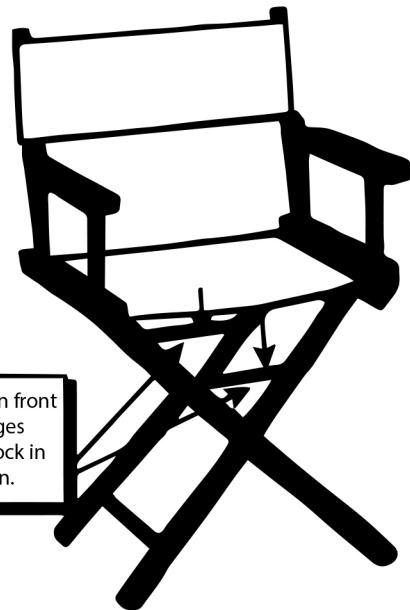

Step #3
Lock front and back leg braces for safety and support.